

# App User Manual

For Cloud Monitoring of  
DL/Mi800W-2B WiFi



## 1. APP Installation and Login

### 1.1 APP Installation

Step 1: Search for "Smart Life" in the APP Store;

Step 2: Download and install the application.

Apple App Store



**Smart Life - Smart Living** ⓘ  
 Smart Living  
 Volcano Technology Limited  
 #31 in Lifestyle  
 ★★★★★ 4.7 + 265.1K Ratings  
 Free · Offers In-App Purchases

Android App Store



"Smart Life"

### 1.2 Registration

- Step 1: Click "Login with password" in the upper right corner of the login page;
- Step 2: Enter the page, click "Register" in the upper right corner;
- Step 3: Enter the mobile phone number or email address, click the "Get Verification Code" button;
- Step 4: Enter the received verification code, set the password and click the "Done" button;
- Step 5: Enter the APP.

### 1.3 Login

**Login Method:**

- You can use your mobile phone number for one-click login;
- You can login with WeChat authorization;
- You can login with QQ authorization.

### 1.4 Forgot password

- Step 1: Click "Password Login" in the upper right corner of the login page;
- Step 2: Click the "Forgot Password" button;
- Step 3: Enter the account for which you need to reset your password, and click the "Get Verification Code" ;
- Step 4: Enter the received verification code, and set up a new password.

## 2. Device management



### 2.1 Add Device

#### Method 1

- Step 1: Supply DC power to the input side of the microinverter to start the device;
- Step 2: Open the APP, click the "Add device" button on the "Home" page (for users who use the APP for the first time);
- Step 3: Enable Bluetooth access and geolocation access on your phone;
- Step 4: After searching the microinverter, click the icon of the microinverter. If not found, you can try to restart the microinverter and search again.
- Step 5: Connect the phone to the nearby Wi-Fi;
- Step 6: Return to the APP and enter the Wi-Fi password for the device connection;
- Step 7: Click the "Next step" button and wait for the device to be added.

#### Method 2

- Step 1: Supply DC power to the input side of the microinverter to start the device;
- Step 2: Open the APP, on the "Home page" page, click the "+" button in the upper right corner;
- Step 3: Click the "Add Device" button;
- Step 4: refer to step 3 to step 7 of "**Method 1**".

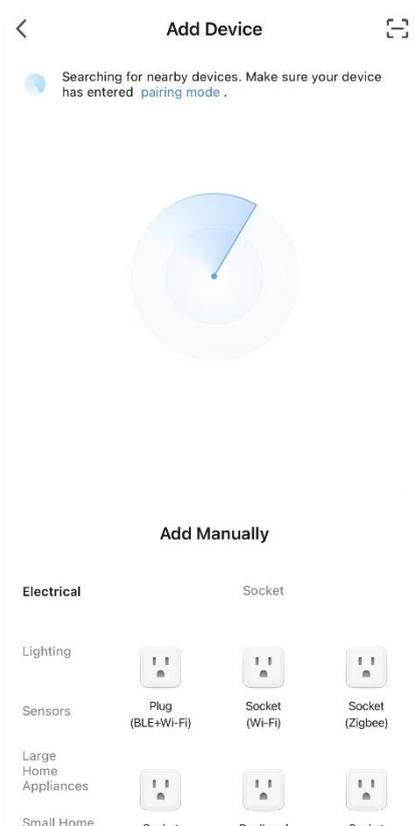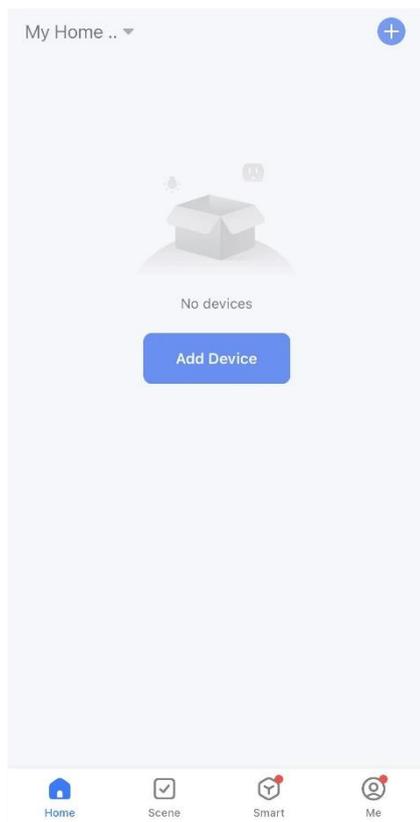

## 2.2 Delete Device

### Method 1


- Step 1: On the "Home" page, long press the microinverter device that needs to be deleted;
- Step 2: Long press to select the microinverter device to be deleted, and click the "Remove device" button below;
- Step 3: Click the " Confirm " button to delete the device.

**Note:** This method is applicable for the batch deletion of devices.


### Method 2

- Step 1: On the "Home" page, click on the microinverter;
- Step 2: Click on the upper right corner of the page "... "button;
- Step 3: Click the "Remove device" button at the bottom of the page;
- Step 4: Click the "Confirm" button to delete the device.

**Note:** If the device is added without selecting the Home, it will be added to the default Home; If the Home needs to be switched after adding the device, the device need to be deleted and added again after switching the Home.

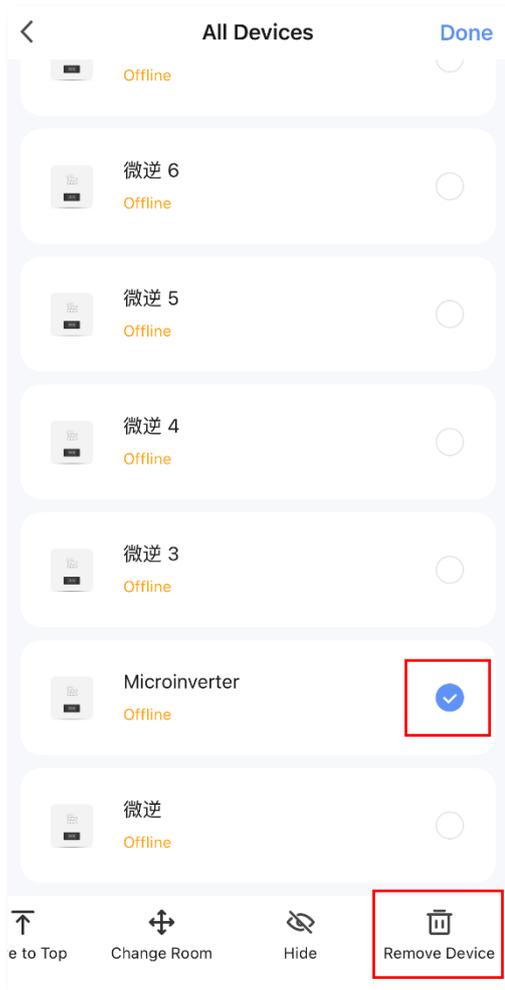


**Method 1**

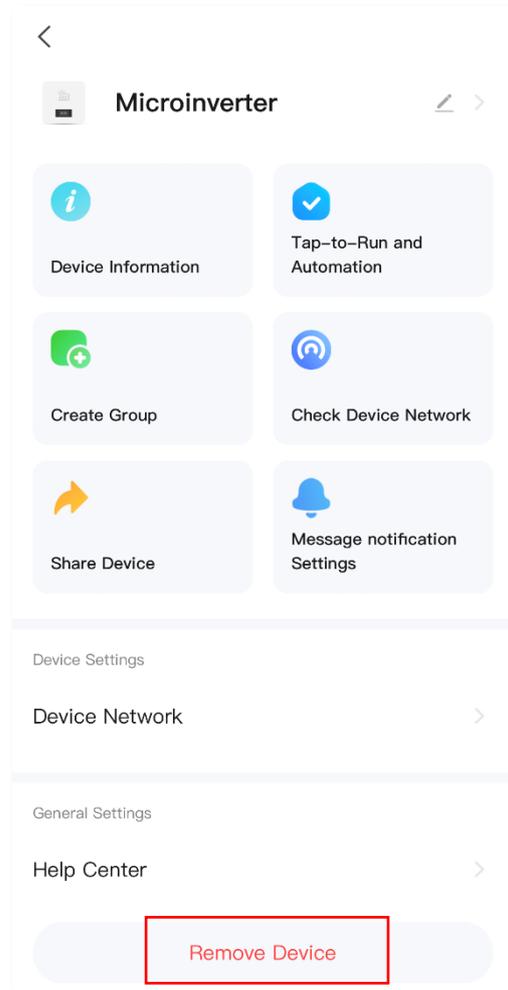

**Method 2**

## 2.3 Share Device


- Step 1: On the "Home" page, click on the microinverter;
- Step 2: Click on the upper right corner of the page "... " button;
- Step 3: Click the "Share device" button;
- Step 4: Devices can be shared through WeChat, SMS, Smart Life, and other ways.

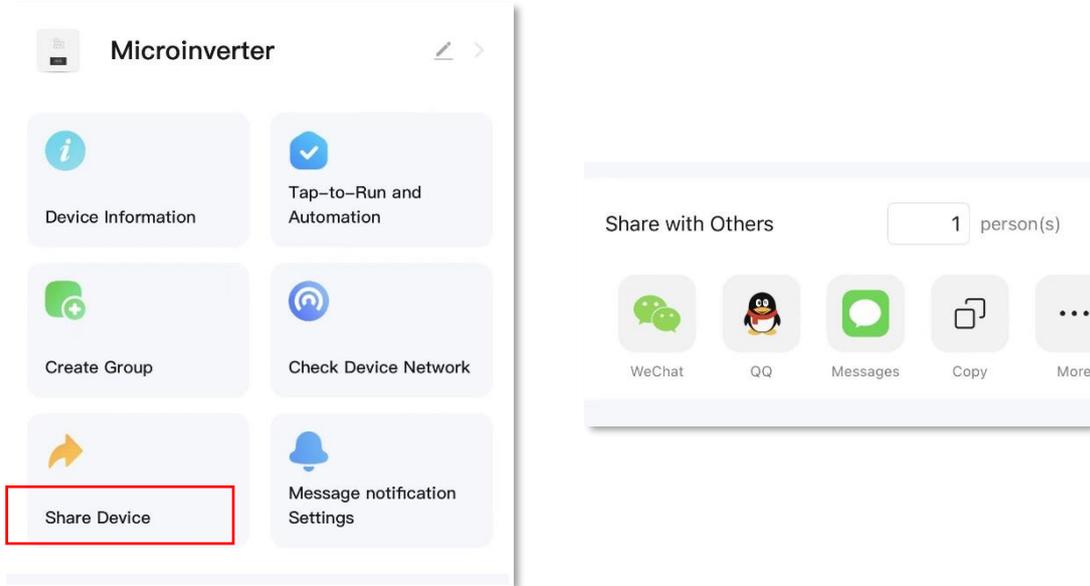

## 2.4 Upgrade Device


- Step 1: On the "Home" page, click on the microinverter;
- Step 2: Click on the upper right corner of the page "... " button;
- Step 3: Click the "Upgrade device" button;
- Step 4: If the device version is not the latest, click on the "Device Upgrade" to upgrade the device.

**Note:** Please make sure there is power supply at DC input side when upgrading the microinverter.

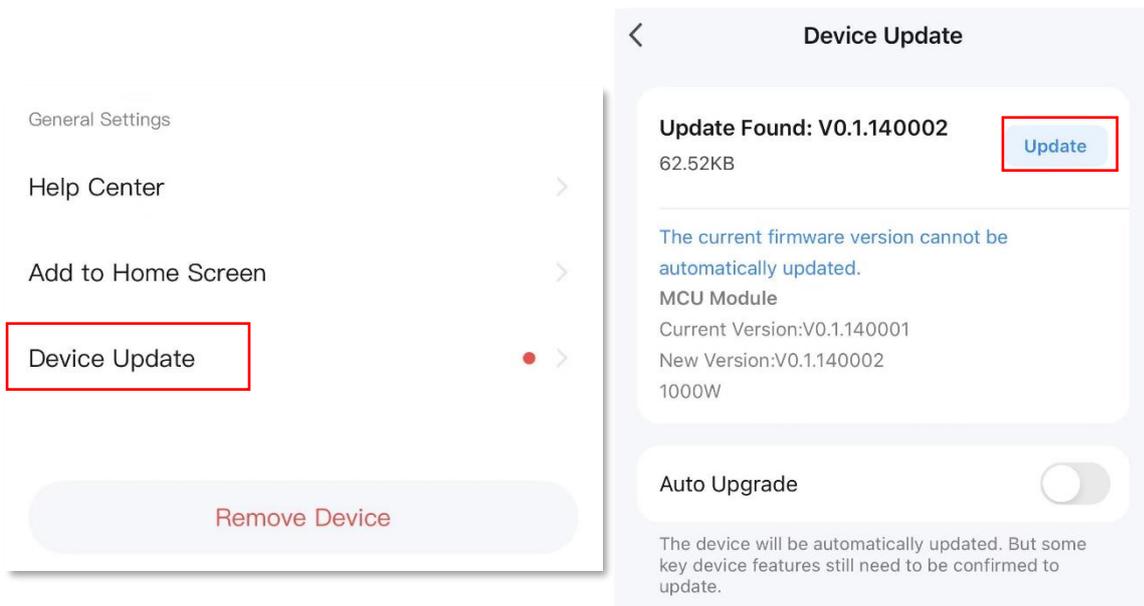


## 2.5 Rename Device

- Step 1: On the "Home" page, click on the microinverter;
- Step 2: Click on the upper right corner of the page "... " button;
- Step 3: Click the  button;
- Step 4: Click the name to rename the device;
- Step 5: Click the "Confirm" button.

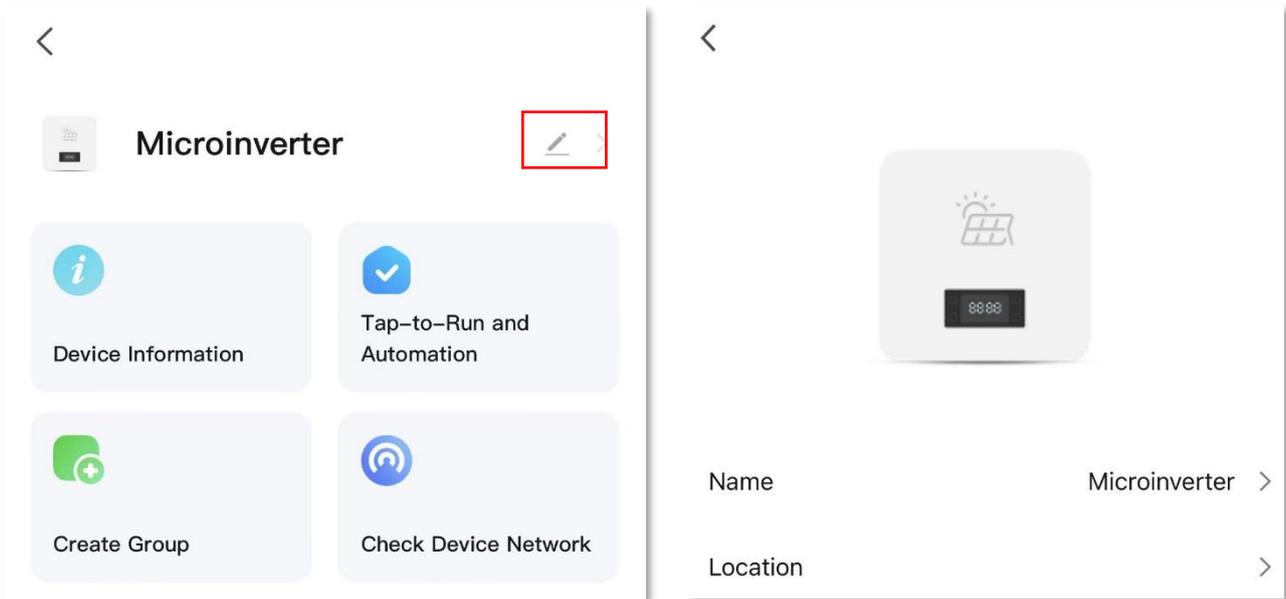



## 2.6 Device Information

- Step 1: On the "Home" page, click on the microinverter;
- Step 2: Click on the upper right corner of the page "... "button;
- Step 3: Click the "Device Information" button to view the IP, MAC, and other information of the device.

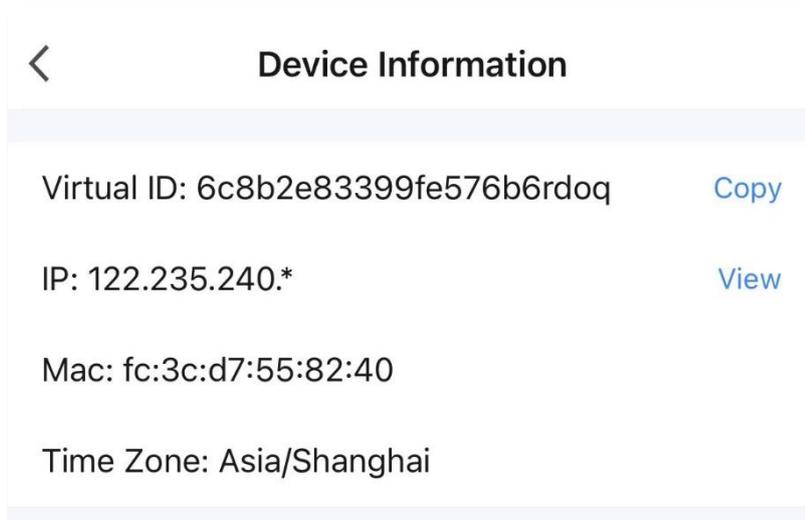

## 2.7 Device Network Setting

- Step 1: On the "Home" page, click on the microinverter;
- Step 2: Click on the upper right corner of the page "... "button;
- Step 3: Click the "Device Network" button;
- Step 4: ① Click the "Device Network" button to switch the device network connection;  
 ② Click the "Standby Network" button to add another network in.

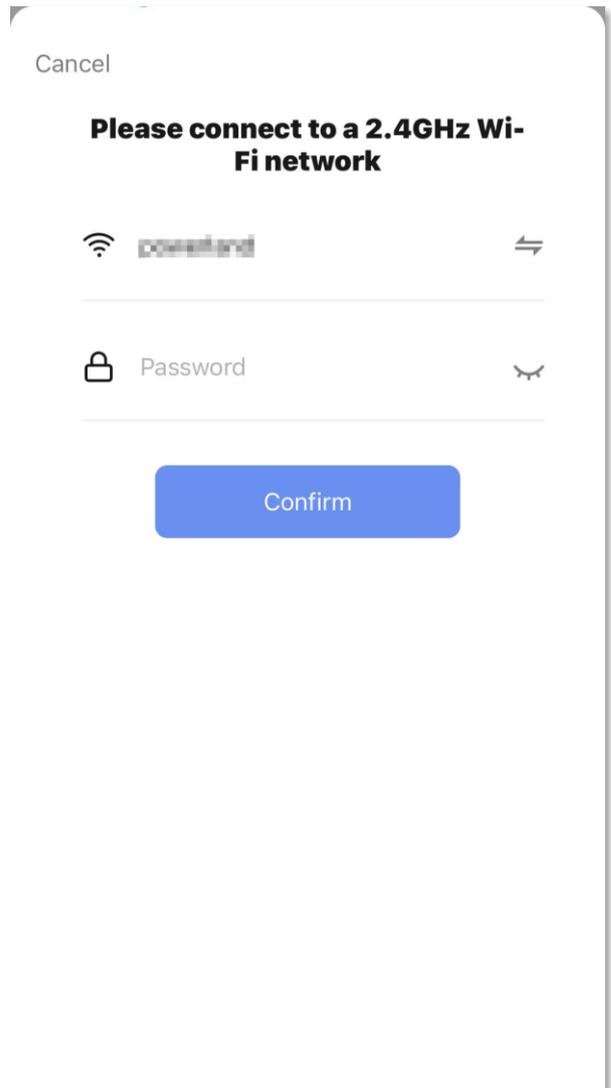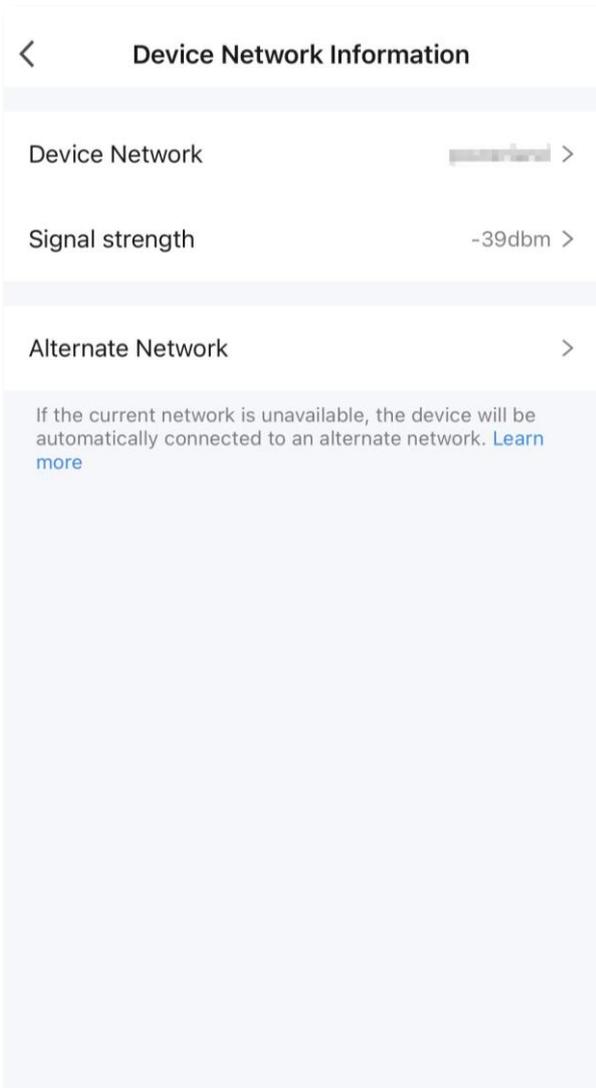


### 3. Data view

#### 3.1 Data List

Item	Description
Weather	Including weather conditions, sunshine duration, and temperature.
Power Generation Data	Including daily, weekly, monthly and total power generation.
Power Data	Including the DC-side voltage, current, power and AC-side voltage, current, power, and frequency.
Income	Including weekly, monthly and total income.
Device Information	The working condition includes self check mode and running on-grid; The temperature represents the current temperature of microinverter; The Wi-Fi signal represents the signal strength of Wi-Fi.
Environment Protection	Including CO2 emission reduction and equivalent tree planting amount

#### 3.2 Environment Protection

- Step 1: On the "Home " page, click on the microinverter ;
- Step 2: Click the "Home" button below to view the data of the 2.1 data list;
- Step 3: Click the the "Environment Protection" button in the upper right corner, and the CO2 emission reduction and equivalent tree planting can be viewed below.

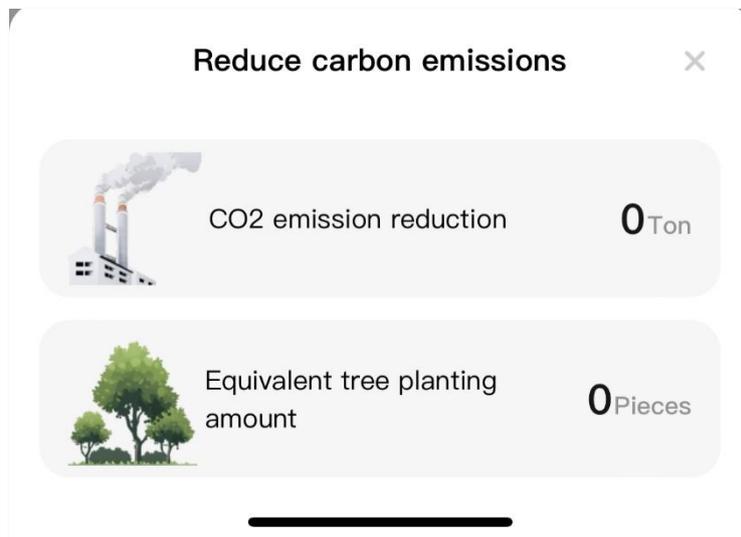

### 3.3 Real Time Data

- Step 1: On the "Home " page, click on the microinverter;
- Step 2: Click the "Home" button below to view weather, power generation data, input and output power, and microinverter condition.

**Notes:** Those data are updated every 5 minutes or so.

The screenshot displays the 'Microinverter' monitoring interface. At the top, it shows the weather as 35°C and an 'Environment protection' indicator. Below this, sunrise and sunset times are listed (5:26 AM and 18:39 PM). The central part of the screen features three circular gauges: 'PV input power' (0 W), 'AC output power' (0 W), and 'Daily power generation' (0 kWh). A 'Power data' section provides statistics for 'Power this week', 'Power this month', and 'Total Power', all currently at 0 kWh. The 'Device information' section includes a 'Go set up' button, 'Working condition', 'Temperature' (24°C), and 'WIFI signal'. A 'Self check mode' indicator is also present. The bottom navigation bar contains 'Home', 'Energy analysis', and 'Setting' options. Annotations with arrows point to these various elements from external text labels.

Weather → 35°C

Environment protection

Sunrise 5:26 AM Sunset 18:39 PM

PV input power → 0<sub>w</sub>

AC out put power → 0<sub>w</sub>

Daily power generation → 0<sub>kWh</sub> Today's power generation

Power generation statistics

Power data

Income

Power this week 0<sub>kWh</sub> Power this month 0<sub>kWh</sub> Total Power 0<sub>kWh</sub>

Device information

Go set up

Working condition

Self check mode

Temperature 24°C

WIFI signal

Home Energy analysis Setting


The efficiency of the microinverter (output power / set maximum power) →

Microinverter condition →

### 3.4 Income


- Step 1: On the "Home " page, click on the microinverter;
- Step 2: Click the "Home" button;
- Step 3: Click the "Income" button in the power data row to view the income data, as shown in the right figure.

**Note:** To check the income situation, you need to set the income unit price and unit first.

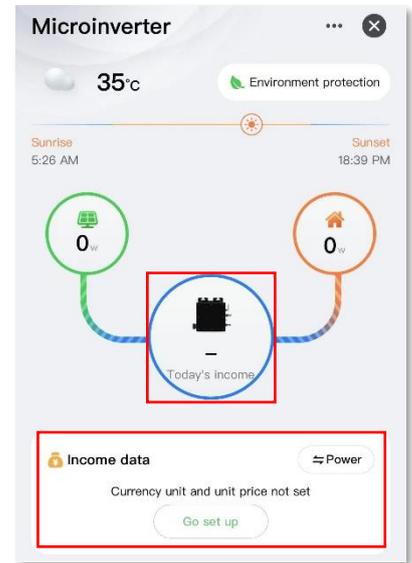


### 3.5 Microinverter Data

- Step 1: On the "Home " page, click on the microinverter;
- Step 2: Click the "Home" button;
- Step 3: Click the button  in the "Device Information" row to view the DC-side data and AC-side data of the microinverter, as shown in the following figure.

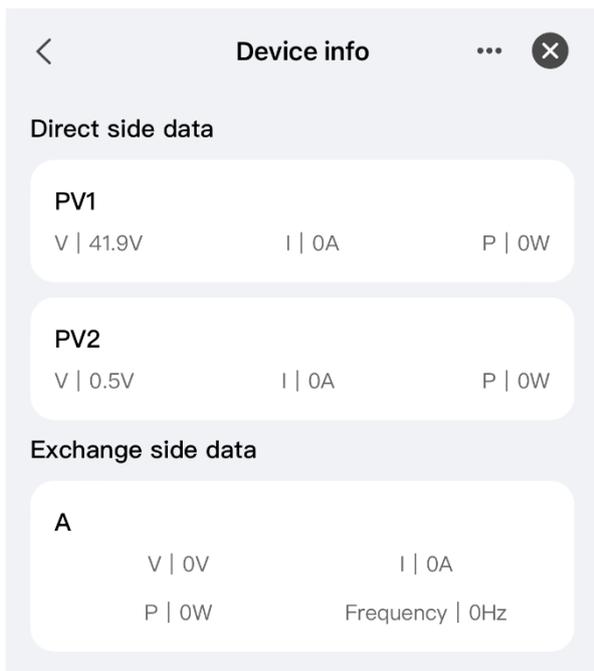

### 3.6 Energy Analysis

- Step 1: On the "Home " page, click on the microinverter;
- Step 2: Click the "Home" Energy Analysis button.
- Step 3: The daily, weekly, monthly and annual power generation curves of the microinverter can be viewed, as shown on the right figure.

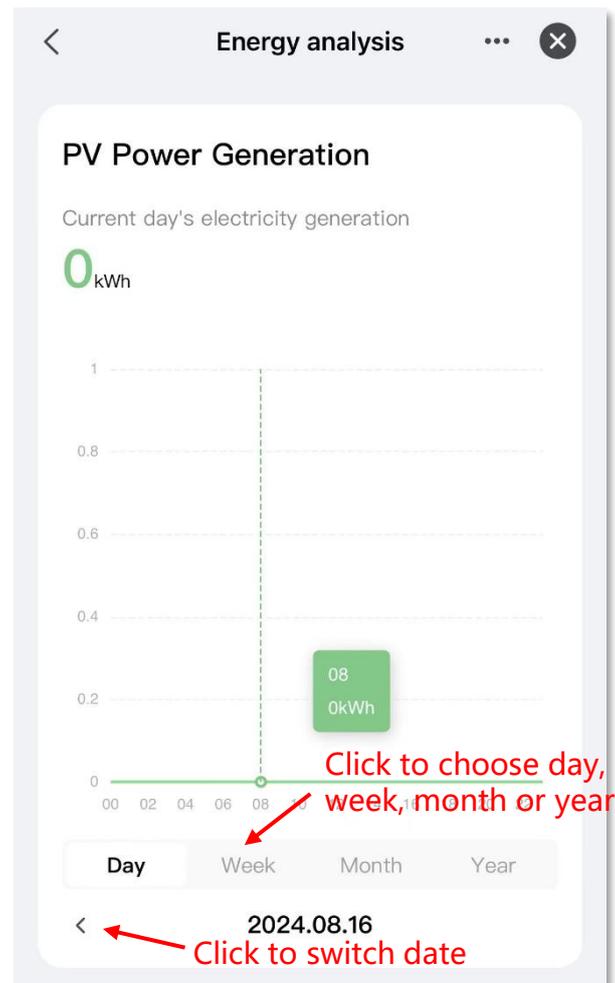


## 4. System Setting

### Go to the Setting Page:

- Step 1: On the "Home" page, click on the microinverter;
- Step 2: Click the "Setting" button below.


### 4.1 Power on and off of Microinverter

- Step 1: Go to the settings page;
- Step 2: In the "Power on/off" line, you can switch the on or off.

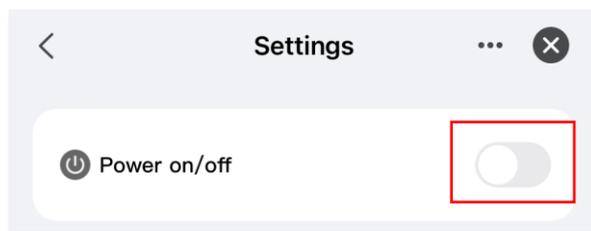


### 4.2 System Information

- Step 1: Go to the settings page;
- Step 2: Click "System Information" to view the Device model, Hardware version, Firmware version, Device SN and Device ID.

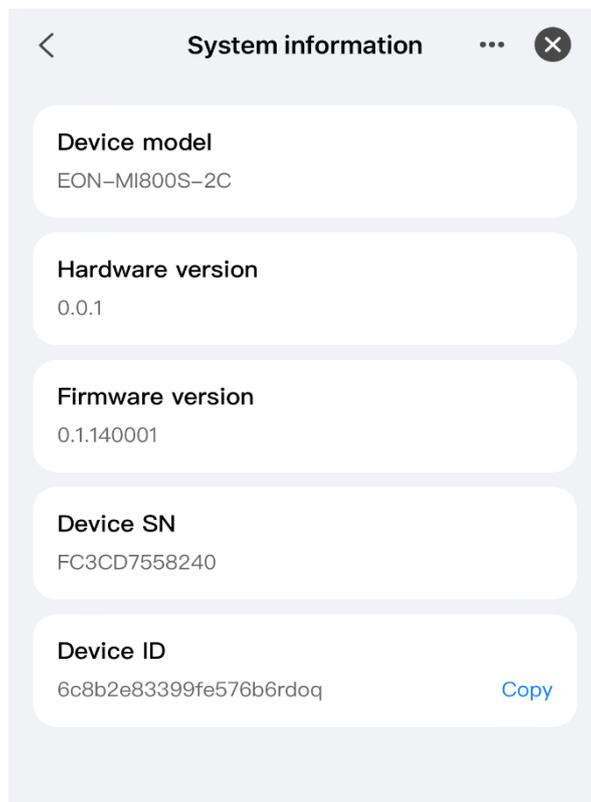


### 4.3 Alarm Information

- Step 1: Go to the settings page;
- Step 2: Click "Alarm Information" to view the Alarm History of microinverter of day, week, month or year, including solved and unsolved.

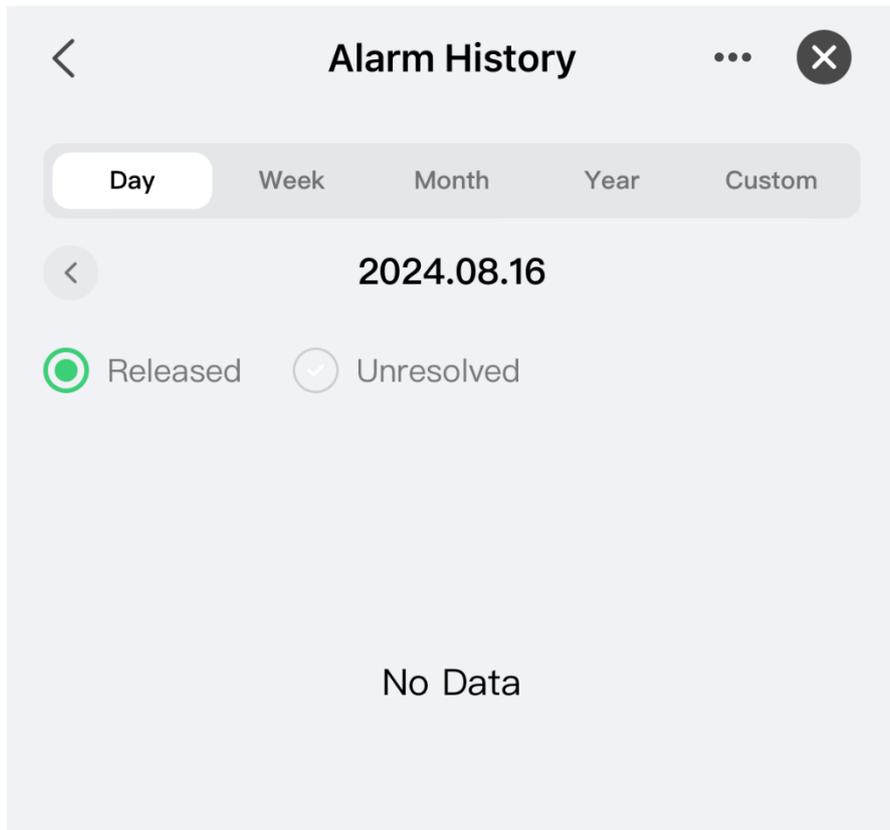

### 4.4 Maximum Output Power


- Step 1: Go to the settings page;
- Step 2: Input the power value to set and limit the maximum output power of the microinverter.

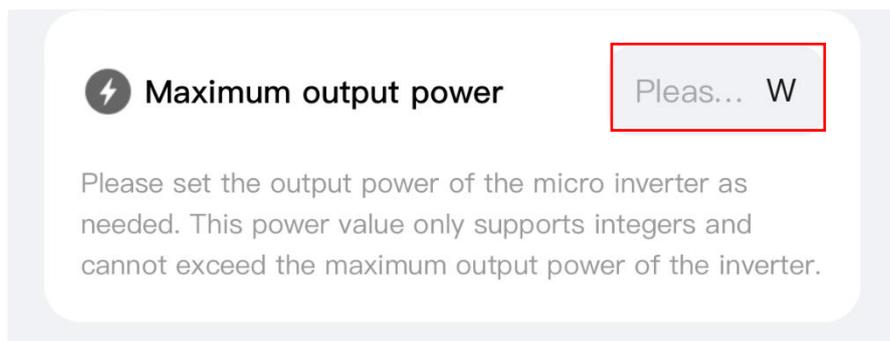

## 4.5 Electricity Price


### Set unit price

- Step 1: Go to the settings page;
- Step 2: Set the unit price of the electricity price.

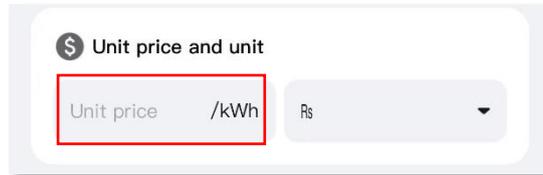

### Set price unit

- Step 1: Go to the settings page;
- Step 2: Click the button  to set the price unit


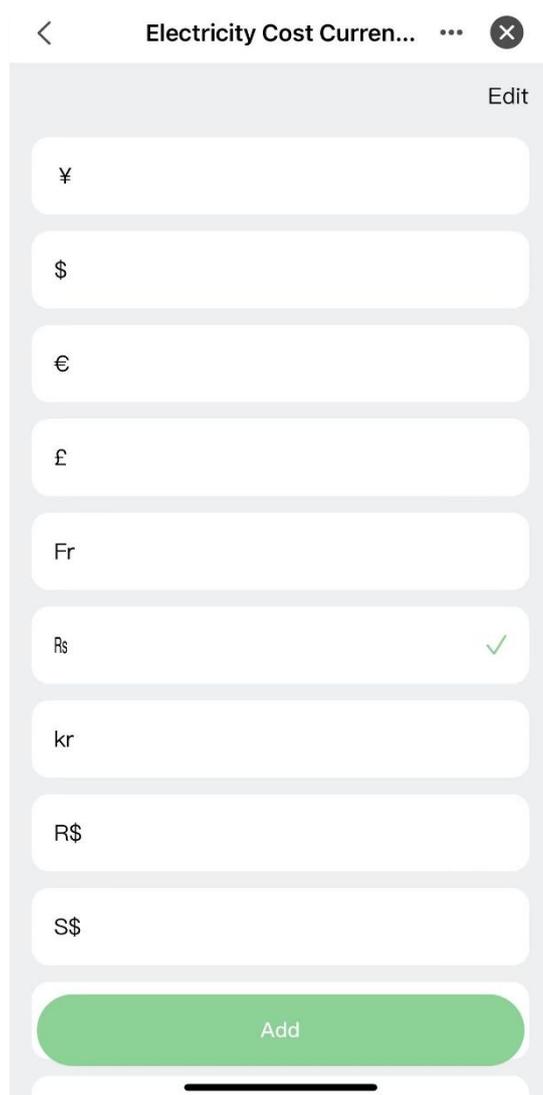


**Note:** Applicable for single microinverter electricity price setting.

## 5. Home Management


### 5.1 Create A Home

- Step 1: On the "Me" page, click the "Home Management" button;
- Step 2: Click the "Create A Home" button and fill in the relevant information to create a home and room.

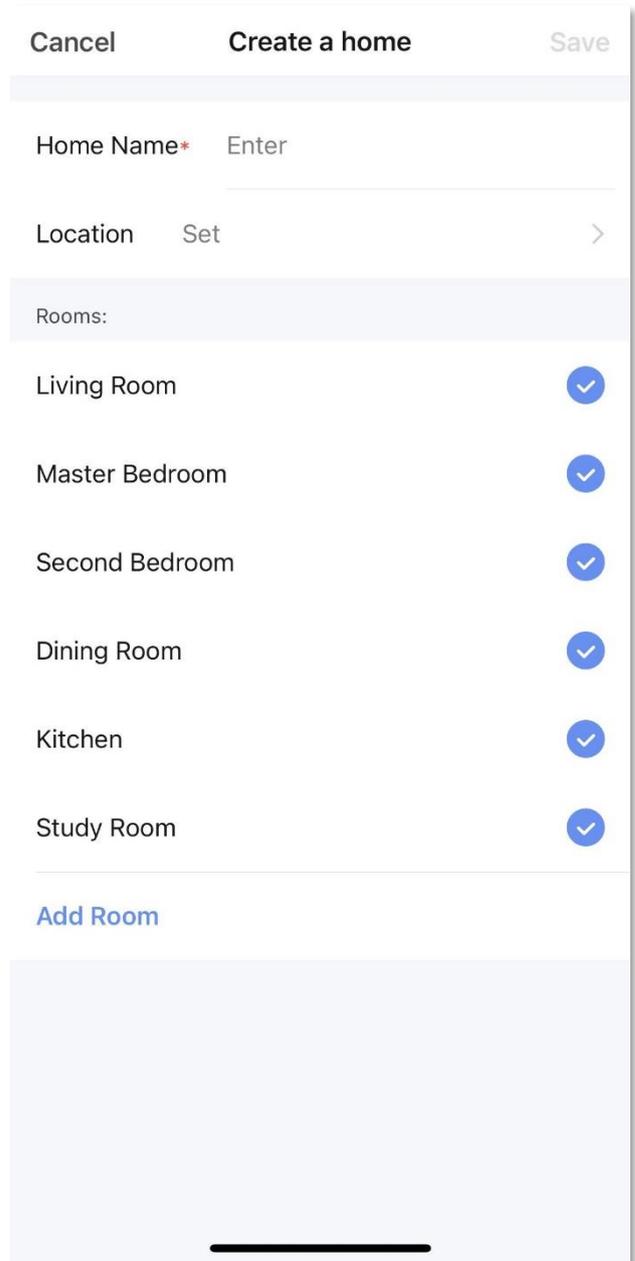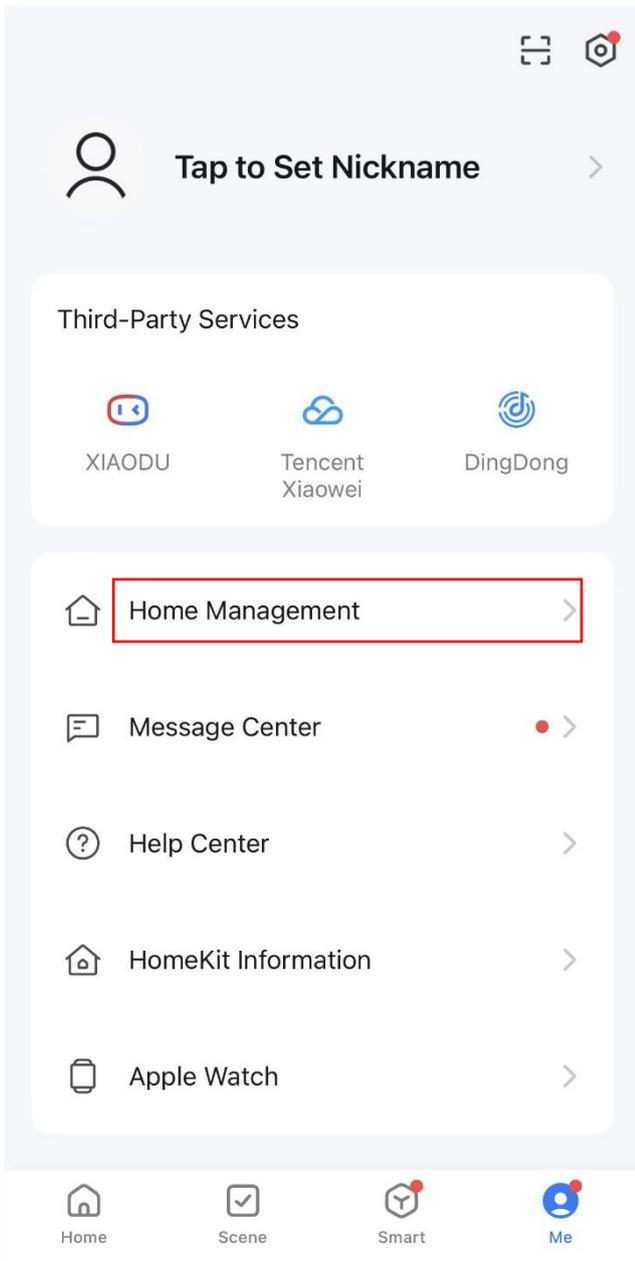



### 5.2 Join A Home

- Step 1: On the "Me" page, click the "Home Management" button;
- Step 2: Click the "Join A Home" button and enter the home invitation code (shared from the home creator).

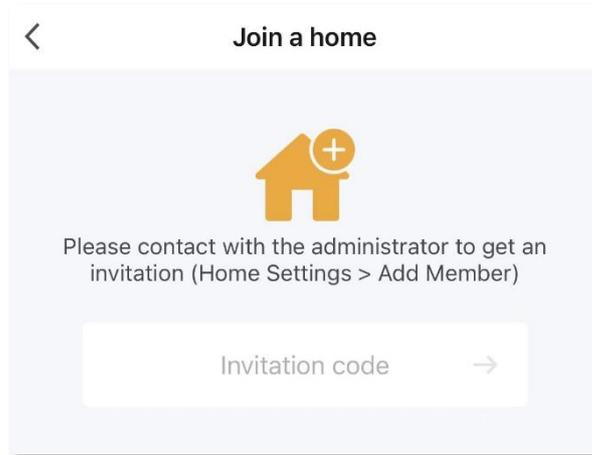


### 5.3 Add Home Member

- Step 1: On the "Me" page, click the "Home Management" button;
- Step 3: Choose the home you want to add members to, click the "Add Member" button, as shown on the right ;
- Step 4: Home members can be invited through Wechat, Dingtalk, etc. Home members include administrators (can manage equipment, rooms, members) and common members.

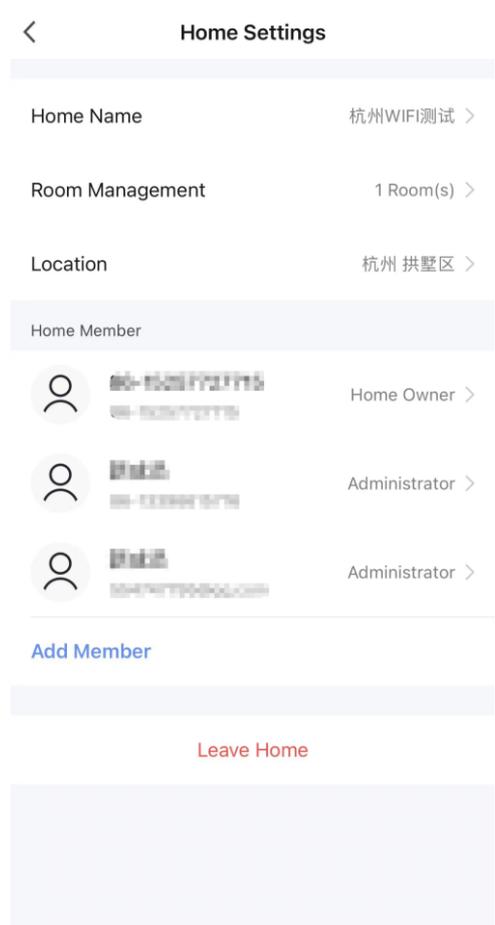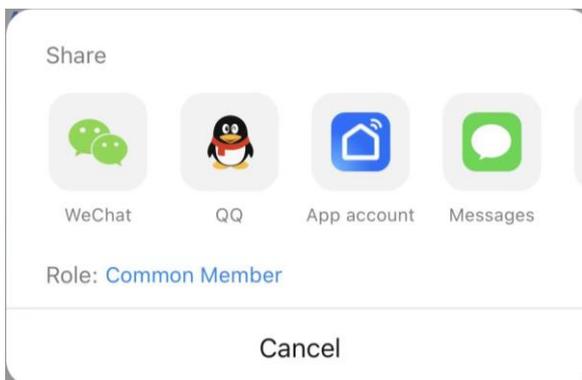

## 5.4 Switch Home


- Step 1: On the "Home" page, click the upper left corner button  ;
- Step 2: Click to switch home.

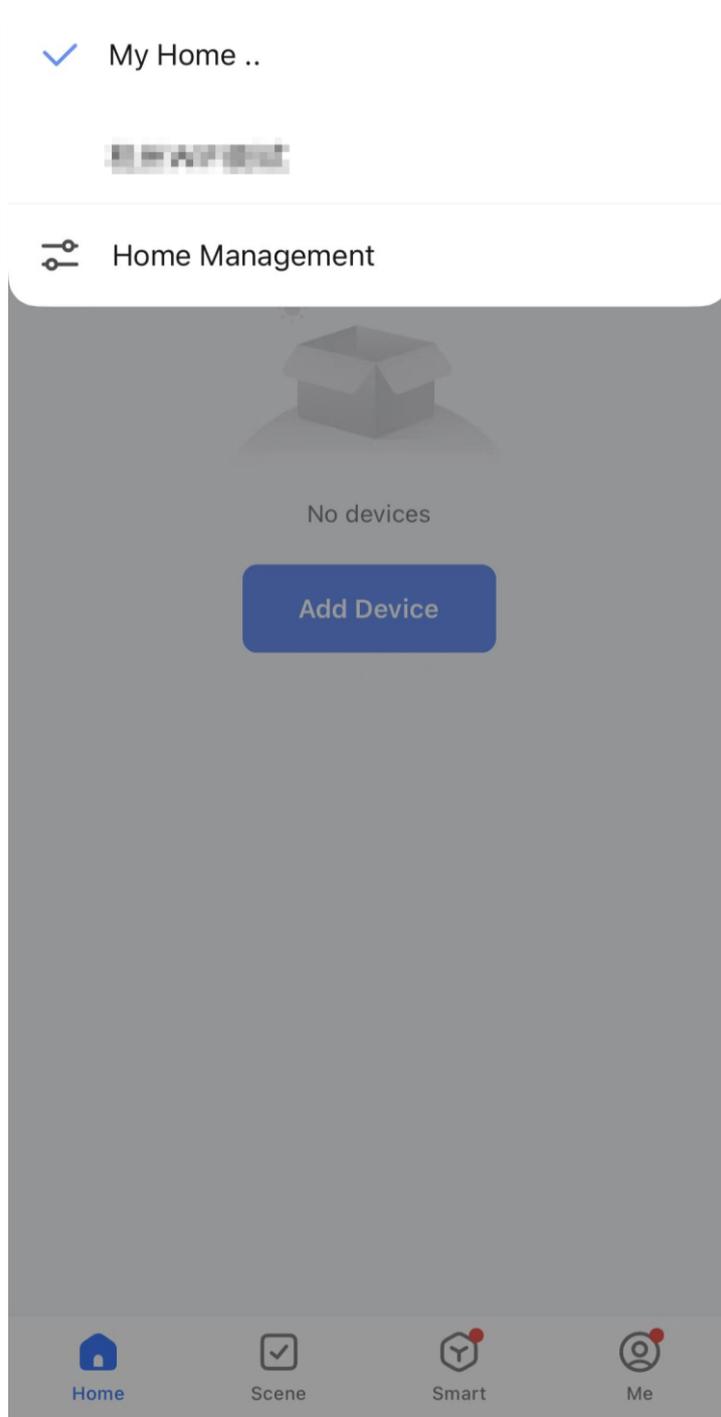

## 6. Others

### 6.1 Language Settings

- Step 1: Enter the APP and click the "Me" button below;
- Step 2: Click the upper right setting button;
- Step 3: Click the "Language" button to set the language.

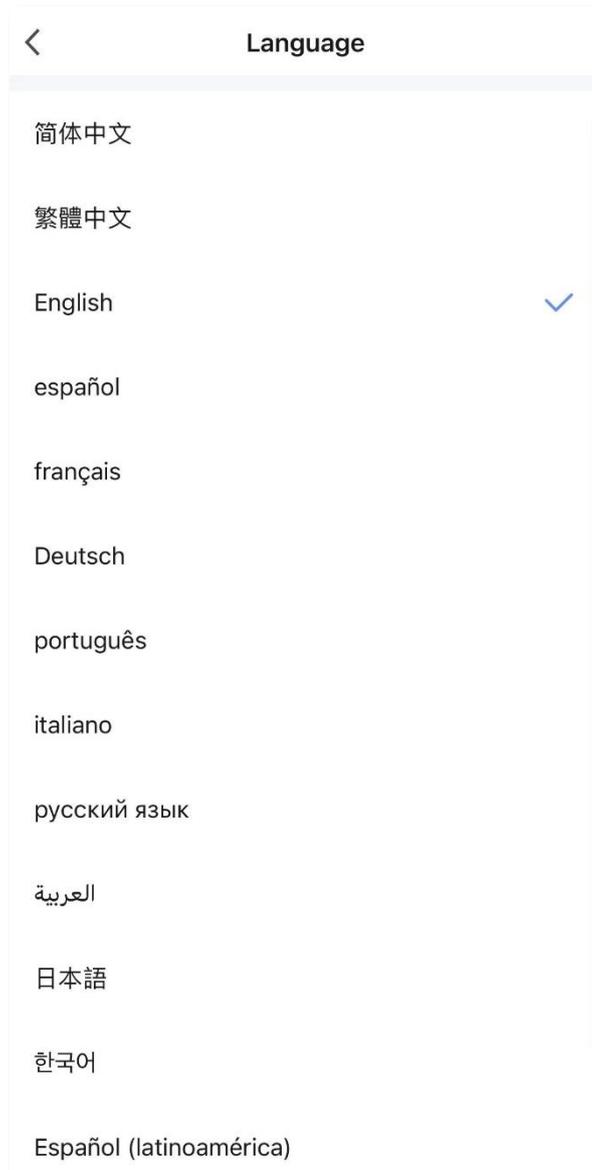

### 6.2 Log out

- Step 1: Enter the APP and click the "Me" button below;
- Step 2: Click the upper right setting button;
- Step 3: Scroll down, click the "Log Out" button.